



Notice the hooks are connected.

This will not allow the trigger to reset.




This is the correct reset. The disconnect distance is correct and space is available for reset.



When the bolt carrier resets the hammer the hooks are extremely close but never actually make contact. They should never touch unless you do not release the trigger.



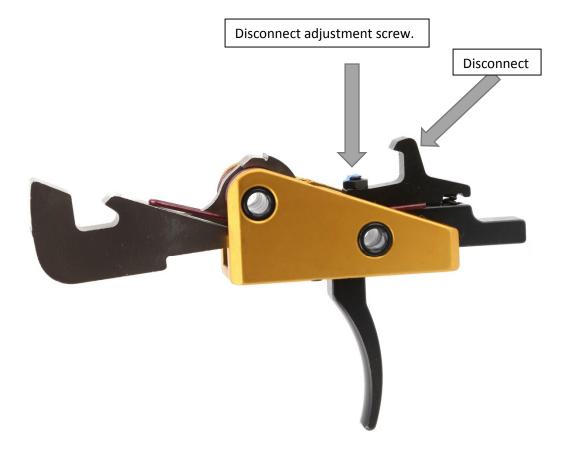

Tools Needed:

.050 Allen Wrench

3/16 Combination wrench

To adjust the disconnect distance it will be necessary to loosen the lock nut and turn the screw clockwise. Reset the hammer frequently to find the sweet spot, the disconnect and hammer should be as close as possible without touching. (see pictures above.)

Once the distance is set the lock nut will need to be tightened. It is necessary to keep the wrench in the screw so it doesn't move while snugging the nut.