

TRIGGER INSTALLATION INSTRUCTIONS

CZ - 455



Before beginning work on any firearm, remove the ammunition source and double check to insure the chamber is empty.

In order for the Timney Drop-In Trigger for the CZ 455 rifle to work, you'll need to remove some wood from the inside of the rifle stock. The tools you'll need for this installation are a flat tip screw driver (or a T30 Torx wrench - later models have Torx stock screws), a .085 inch punch, a 5/64 hex wrench, a small hammer and a Dremel tool.

Remove the magazine, make sure the rifle is unloaded and remove the barreled action from the stock by taking out the two stock screws (DIAGRAM A). Then, remove the trigger guard and the trigger plate which are held in place by the stock screws.

The factory trigger and sear are held in place by two pins; one at the rear of the trigger and one for the sear (DIAGRAM B). Drive both pins out (DIAGRAM C) and lay them to the side. You'll need them to install the Timney trigger. You won't need the sear, the factory trigger and the small ball bearing that goes with the sear. (DIAGRAM D)

Now you can install your new Timney Trigger using the factory rear trigger pin and sear pin (DIAGRAM E). Drive in all pins so that they are flush with the action. Once the pins are in place, tighten the trigger locking screw so it is snug (DIAGRAM E)






It will be necessary to remove a bit of wood from the inside of the stock so the action with the Timney trigger installed will fit without binding. This is best accomplished with a Dremel tool. Remove the wood as shown in Diagrams F & G.

You can enlarge the trigger opening to match the inletting for the trigger guard. You'll also need to remove wood between the rear action screw hole and the trigger. Work slowly and check as you go by inserting the barreled action into the stock to see if it fits. Once fitted; you're ready to reassemble. Its important that the new Timney Trigger does not bind against the stock.

While you are working with the barreled action, the pin that holds the magazine release inside the magazine well has a tendency to fall out. Pay attention to this. You can place a small piece of tape over the pin to keep it in place as you work. Remove the tape before final installation.

Once reassembled, check to make sure everything functions properly and you're ready to go shooting.

INSTALLATION DIAGRAMS ON BACK

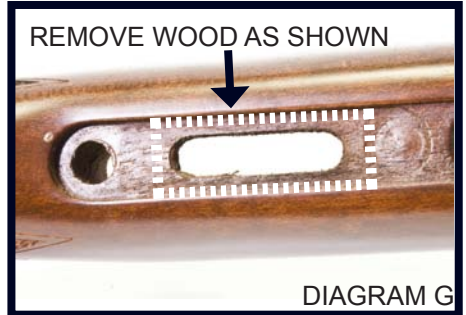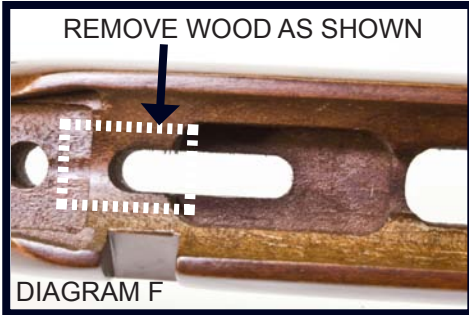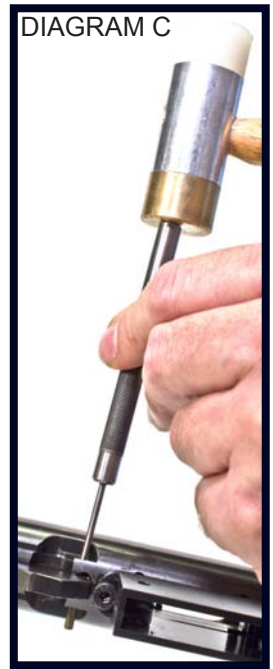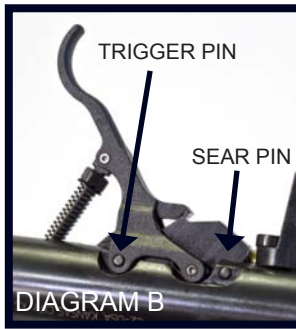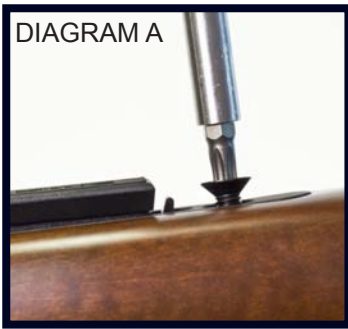

NOTE: If you have trouble, contact Timney or check out the troubleshooting steps on the Timney web site. Timney will also install your trigger for \$ 40.00 plus \$ 35.00 shipping and handling.

TIMNEY TRIGGER GUARANTEE

Material and workmanship: This TIMNEY trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, necessary repairs, including parts and labor will be made at no charge to the purchaser, providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume us for any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner, without specific authorization, voids the guarantee.

TIMNEY MFG. 3940 W. CLARENDON AVE. PHOENIX, AZ 85019

www.timneytriggers.com
Voice 602-274-2999

service@timneytriggers.com
Fax 602-241-0361